



## Flout® DOSE COUNTER Model DC3 INSTALLATION INSTRUCTIONS

(#'s) = Illustration Figure Numbers by Rissy Plastics, LLC

### ABOUT THE COUNTER:

The DC3 Counter is a mechanical tally counter for monitoring the fill/empty cycle of a dosing chamber or similar vessel. It requires no batteries or wiring. It is immune to electrical surges, never forgets, and is housed in a waterproof enclosure. It is activated by a weighted float (3) suspended by a non-corrosive wire. An internal seal allows the wire to activate the counter while keeping out water and contaminants. A dessicant pouch (1) helps to minimize moisture within the enclosure. The Counter mounts on 3" Sch 40 pipe.

### MOUNTING THE COUNTER:

The Counter may be mounted inside or outside of the chamber. Brackets, pipe, fittings, and hardware are supplied by the installer.

The Float (3) may hang free (8,10,12) or be "pipe mounted" inside a 3" pipe (9,11). Pipe mounting is the preferred method if there is turbulence or a chance of entanglement of the pull wire with other equipment in the chamber. **IMPORTANT:** The pipe must be vertical, must allow liquid to enter (bevel bottom), and be vented (1/2" hole) above the highest water line to prevent an air pocket from forming (9,11).

Inside mounting may use a short piece of 3" pvc pipe and brackets (8), or be "pipe mounted" (9).

Outside mounting requires a passage through the chamber ceiling. The Counter may be above grade on an extended stand pipe (5), flush with grade (6), or in a "Hand Hole" (7).

Passage thru the chamber ceiling may be pre-cast or drilled. Some methods are: A 3 inch pipe coupler cast in (10), "pipe mounted" through a 4 inch sleeve cast in, with a 3x4 inch "Fernco" coupler" (11), or free hanging through a small hole with the stand pipe attached to an overturned closet flange (12). When using a small hole, an large access hole must be nearby to attach the Float.

### SETTING THE FLOAT:

A minimum of 6" (150mm) liquid rise and drop is required for the counter to work. Contact Rissy Plastics if the drop is less. The Float (3) comes with 15 feet (4.5 M) of stainless steel pull wire attached. If more is needed, use stainless steel picture wire. Splice securely. Avoid kinking the wire.

The Float must operate in the upper area of the liquid pool. If the wire is too long, jamming or tangling is possible.

Determine the dimension "D" (4) from the top of the installed standpipe to the highest liquid level. Unwind the wire and pass it through the Swivel (1). Set the wire to same dimension "D"(4) from the underside of the cap (4) to the eye bolt on the Float (3). Twist the wire multiple times and trim the excess, leaving a bit of extra wire if adjustment is needed.

Lower the Float into the stand pipe, push the cap onto the pipe, and lock with the setscrew(1). **DO NOT GLUE!**

If using method (12), remove the wire from the Float. Attach the wire to the swivel. Mark the dimension "D"(4) on the wire with a marker or tape, pass it down the stand pipe and through the small hole. Push the cap onto the pipe, and lock with the setscrew(1). **DO NOT GLUE!** Using the access hole, attach the Float at the mark. Twist multiple times and trim the wire leaving a bit extra for adjustment.

### TESTING:

Remove the clear cover and label plate (2) (if equipped). The activator lever (1) should be down. Test fill the chamber. The lever should rise before the chamber reaches maximum depth. If the lever does not rise, remove the Counter and increase the length of the wire. As the chamber empties, the Float will pull the lever back down, registering a count.

### FINISHING UP:

Reset the counter by rotating the knob (1). Using an indelible marker, fill in the start-up date and dose capacity on the label plate (2) (if equipped). Do not remove the dessicant (1). Replace the cover. Do not overtighten the screws.

### MONITORING:

Each dose cycle will raise the count by one. Multiply the count times the dose capacity to find out the amount of liquid dosed. If the system is in use but no count is registered, inspect the counter float and the operation of the dosing devices, otherwise call for service.

# DC3 Dose Counter Illustrations

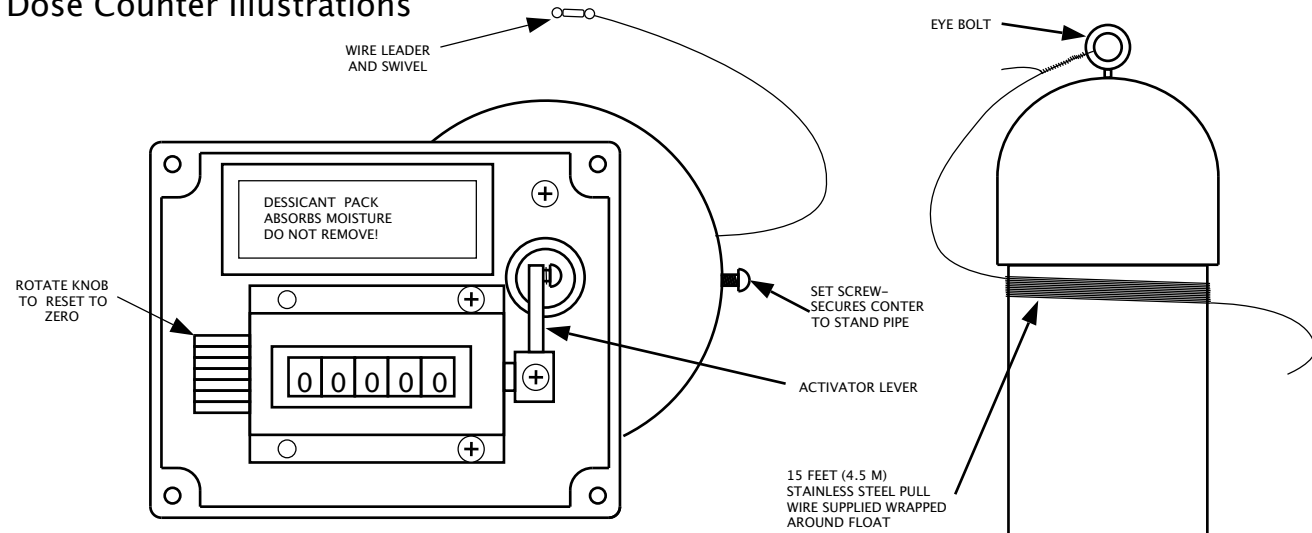


Fig. 1 TOP VIEW with COVER REMOVED- TO RESET TO ZERO

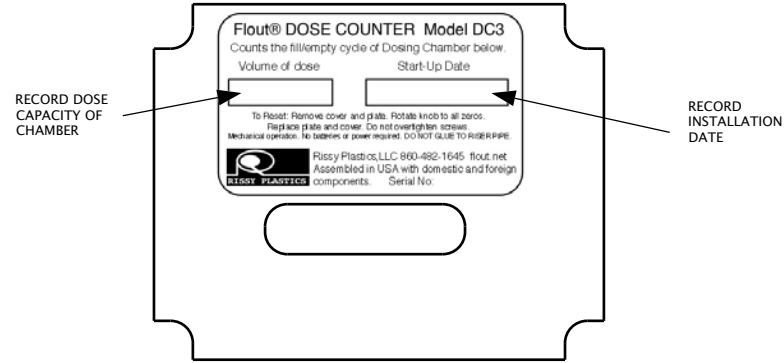


Fig. 2 COVER PLATE VIEW - APPLIES TO SERIAL NO. 101 AND ABOVE

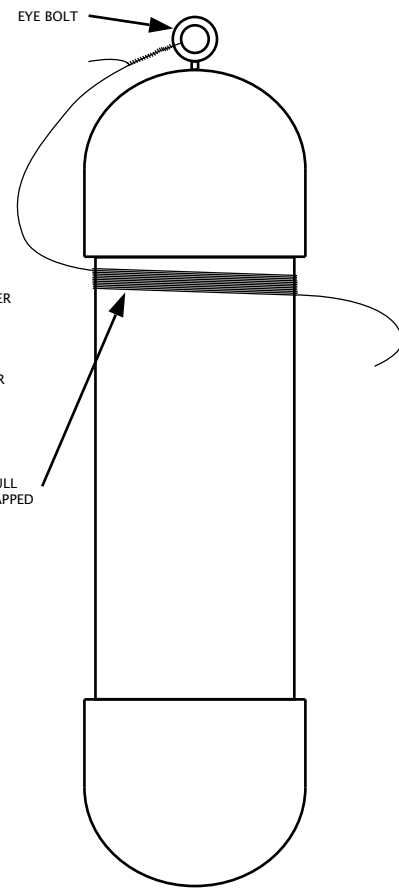


Fig. 3 FLOAT

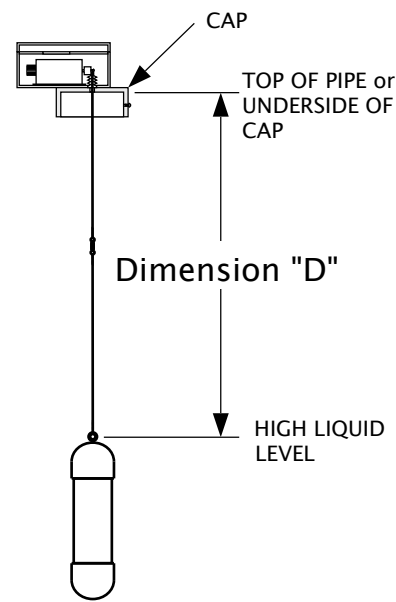


Fig. 4 SETTING LENGTH OF PULL WIRE

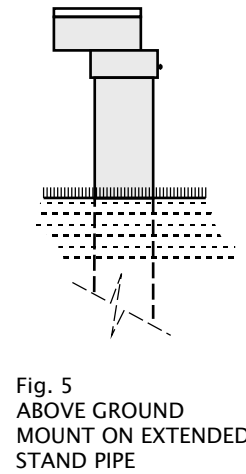


Fig. 5 ABOVE GROUND MOUNT ON EXTENDED STAND PIPE

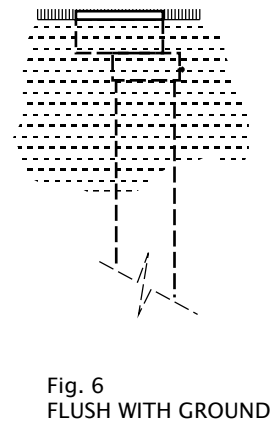


Fig. 6 FLUSH WITH GROUND

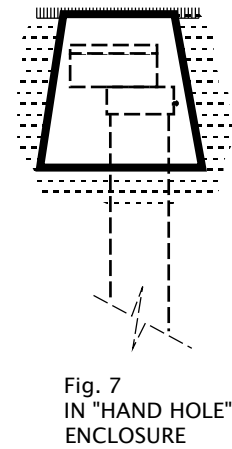


Fig. 7 IN "HAND HOLE" ENCLOSURE

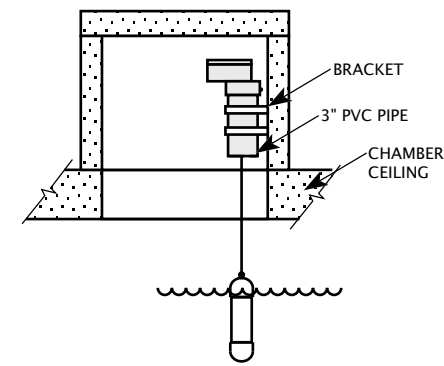


FIG. 8 INSIDE MOUNT- FREE HANGING

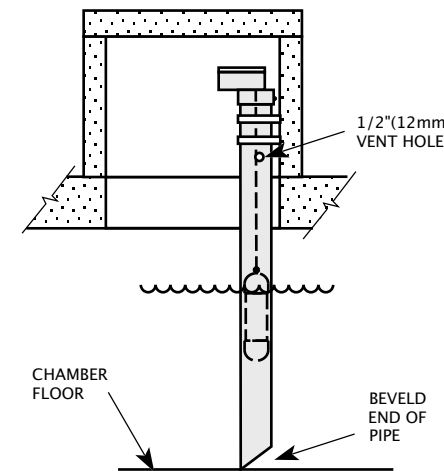


FIG. 9 INSIDE "PIPE MOUNT"

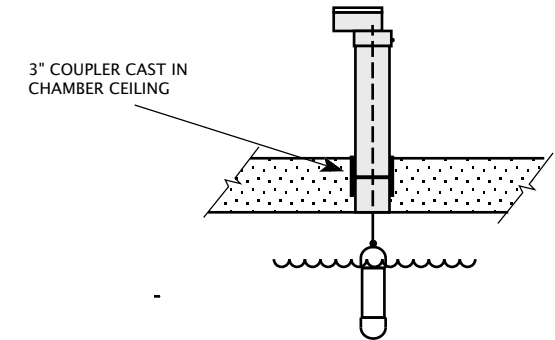


FIG. 10

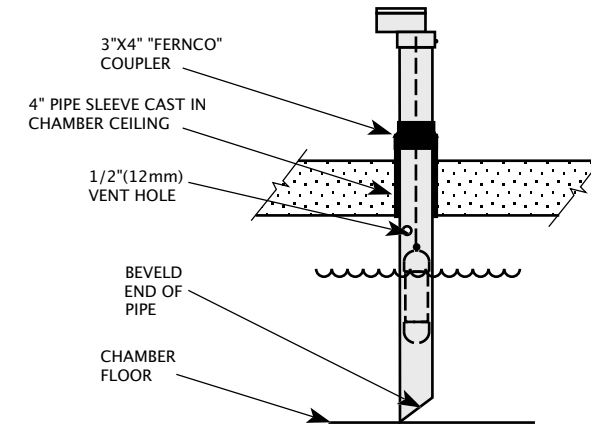


FIG. 11

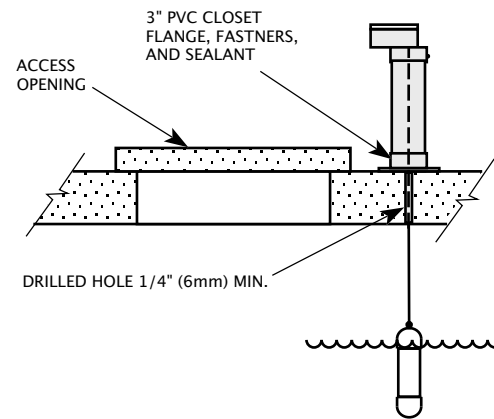


FIG. 12



Rissy Plastics, llc  
350 Cedar Lane  
Torrington, CT 06790 USA  
860-482-1645 877-221-4426  
flout.net tanxrus@aol.com